

Clean Window and Door Screens Without Removing Them!

- Never Wrestle with Screen Removal or the Mess of Spraying Screens with a Garden Hose Again
- Clean Each Individual Mesh and Do It From inside Your Home or Office
- Use a Dry or Moist Clean Cloth and Wipe the Soapy Water off the Screen
- Fast, Easy and Reusable



Specially Formulated & Patented Micro Dart Technology Penetrates Each Mesh Removing Dirt, Grime and Allergens

Instructions:

1. Fill a bucket or pail with clean water and mild detergent. Submerge the ScreenKleen into the soapy water then use the special plastic ScreenKleen squeegee (included) to remove the excess soapy water.
2. Roll the ScreenKleen gently over the entire surface of the window or door screen.
3. Use a dry clean cloth and wipe the soapy water off the screen.